

Art. **N30143**

## NISSAN PRIMASTAR

2000  
09/02 → 05/14


## OPEL VIVARO

2000  
08/01 → 12/13


## RENAULT TRAFIC

2000  
03/01 → 05/14

**KIT x6**

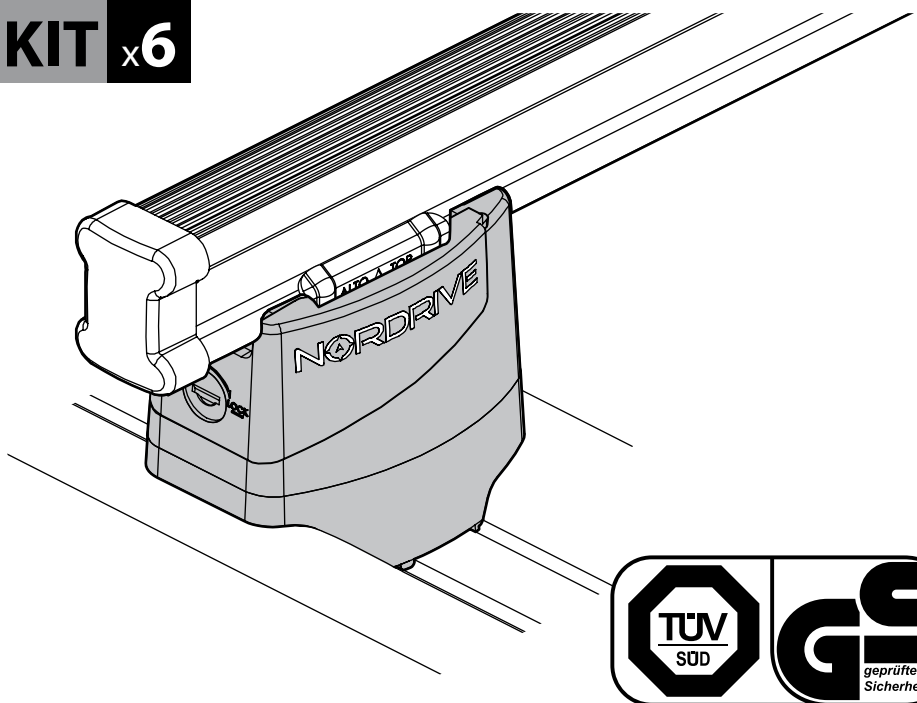


 <input checked="" type="checkbox"/> H = 1335mm L = 3098mm	 <input checked="" type="checkbox"/> H = 1335mm L = 3498mm
 <input type="checkbox"/> H = 1818mm L = 3098mm	 <input type="checkbox"/> H = 1818mm L = 3498mm

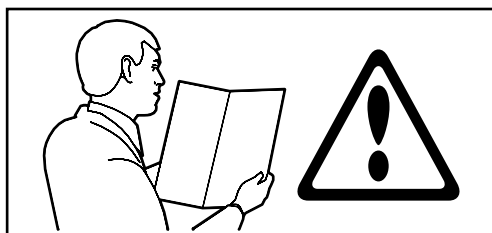

- ⓘ ISTRUZIONI DI MONTAGGIO
- Ⓒ FITTING INSTRUCTIONS
- Ⓓ MONTAGEANLEITUNG
- Ⓕ INSTRUCTIONS DE MONTAGE
- Ⓖ ISTRUCCIONES DE MONTAJE
- Ⓗ INSTRUÇÕES DE MONTAGEM
- Ⓝ MONTAGE-INSTRUCTIES
- Ⓢ MONTERINGSANVISNING
- Ⓕ ASENUSOHJE
- Ⓔ PAIGALDUSJUHEND
- Ⓕ AT STIPRINĀŠANAS INSTRUKCIJA
- Ⓕ LT PRITVIRTINIMO INSTRUKCIJOS
- Ⓕ PL INSTRUKCJA MONTAŻU
- Ⓕ RUS Инструкции по установке
- Ⓕ CZ NÁVOD NA MONTÁŽ
- Ⓕ SK NÁVOD NA MONTÁŽ
- Ⓕ SLO NAVODILA ZA PRITRJEVANJE
- Ⓕ HR UPUTA ZA SASTAVLJANJE
- Ⓕ H A FELSZERELÉS MÓDJA
- Ⓕ GR Οδηγίες συναρμολόγησης
- Ⓕ TR MONTAJ TALIMATLARL
- Ⓕ BG ИНСТРУКЦИИ ЗА МОНТАЖ
- Ⓕ SRB UPUTSTVA ZA MONTAŽU


- ⓘ ADATTO PER
- Ⓒ SUITABLE FOR
- Ⓕ INDIQUÉ POUR
- Ⓓ GEEIGNET FÜR
- Ⓖ ADECUADA PARA

## NORDRIVE KARGO SERIES

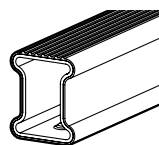


**Kargo**  
ACCIAIO  
Steel

- ⓘ BARRE KARGO
- Ⓒ KARGO BARS
- Ⓕ BARRES KARGO
- Ⓓ DACH-LASTENTRÄGER KARGO
- Ⓖ BARRES KARGO

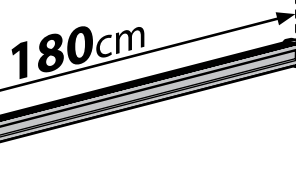


Art. **N10015** x3


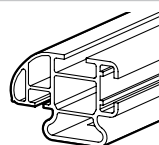


**Kargo-Plus**  
ALLUMINIO  
Aluminium

- ⓘ BARRE KARGO-PLUS
- Ⓒ KARGO-PLUS BARS
- Ⓕ BARRES KARGO-PLUS
- Ⓓ DACH-LASTENTRÄGER KARGO-PLUS
- Ⓖ BARRES KARGO-PLUS

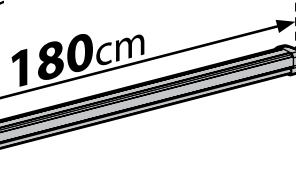


Art. **N10045** x3

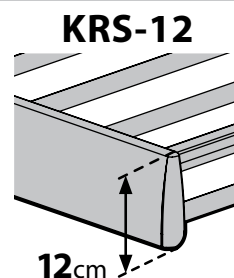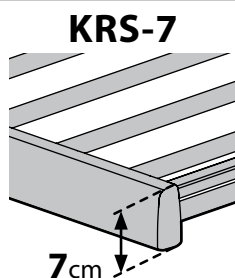

- ⓘ CESTE PORTATUTTO KRS-7 / KRS-12
- Ⓒ KRS-7 / KRS-12 VAN ROOF RACKS
- Ⓕ GALERIE KRS-7 / KRS-12
- Ⓓ DACHKÖRBEIN KRS-7 / KRS-12
- Ⓖ BACAS KRS-7 / KRS-12









**NORDRIVE**<sup>®</sup>  
TRANSPORT SOLUTIONS












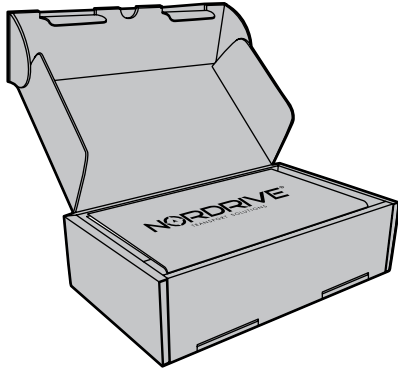




# NORDRIVE®

TRANSPORT SOLUTIONS

Art. **N30143**

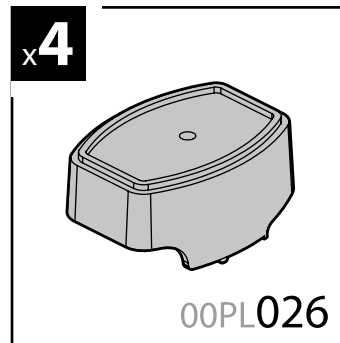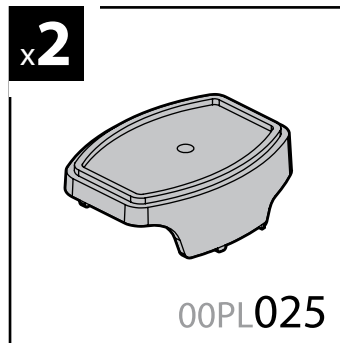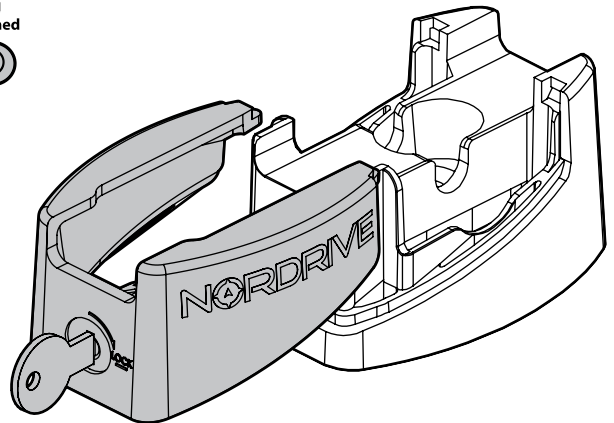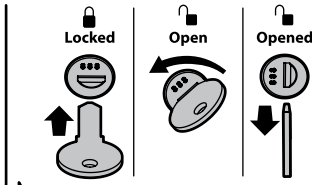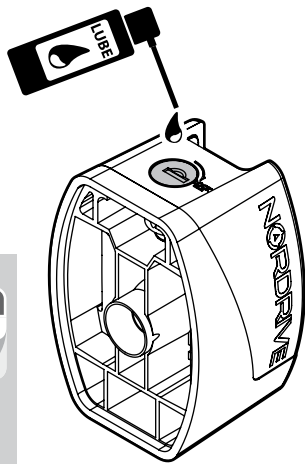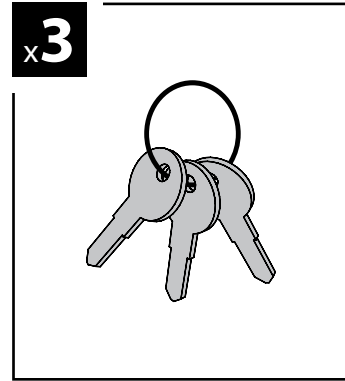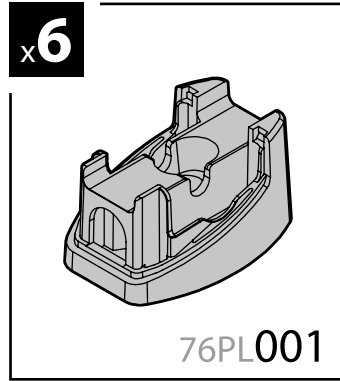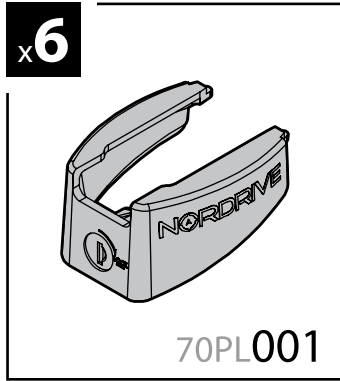

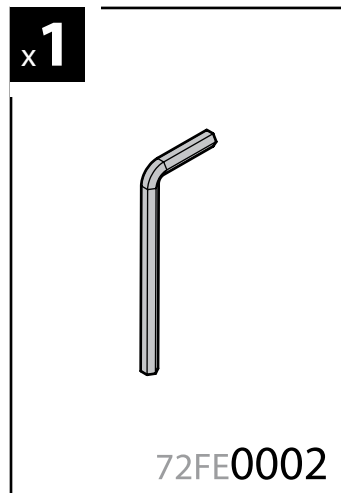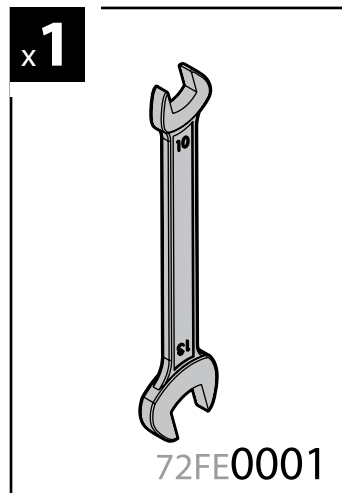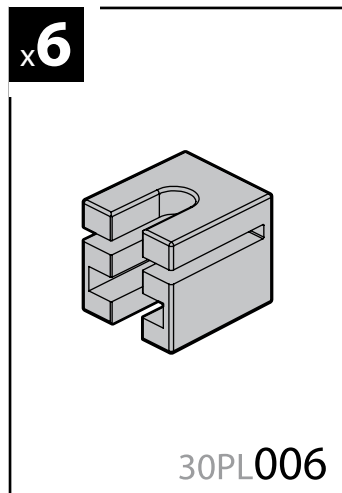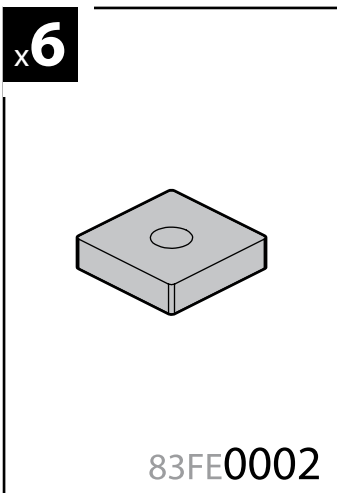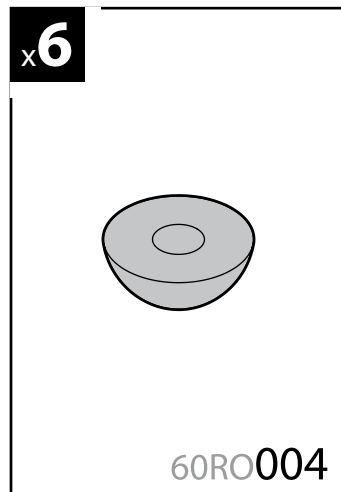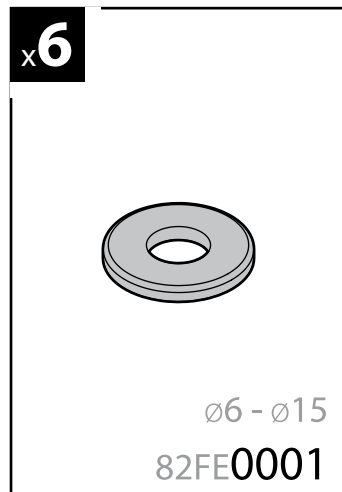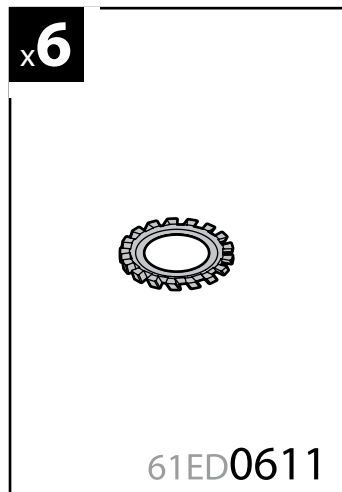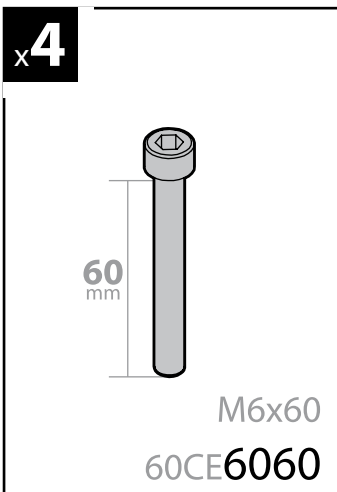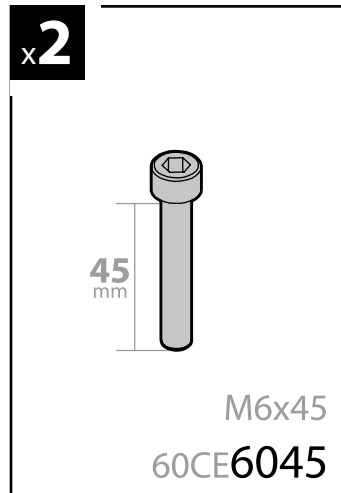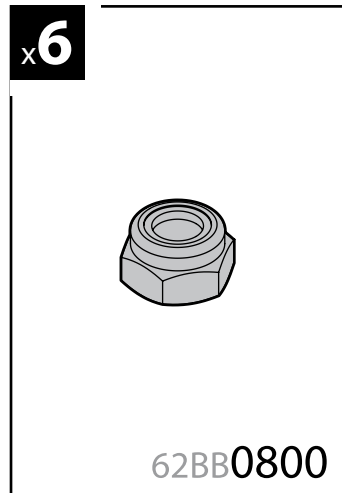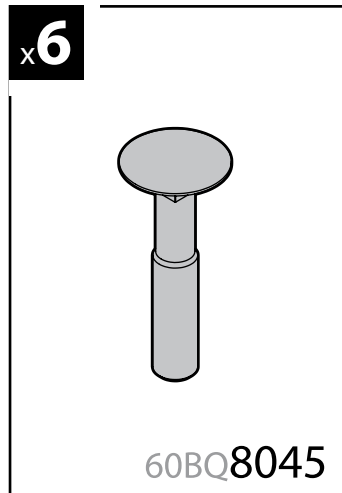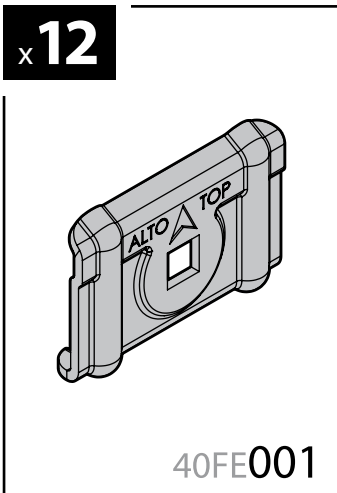

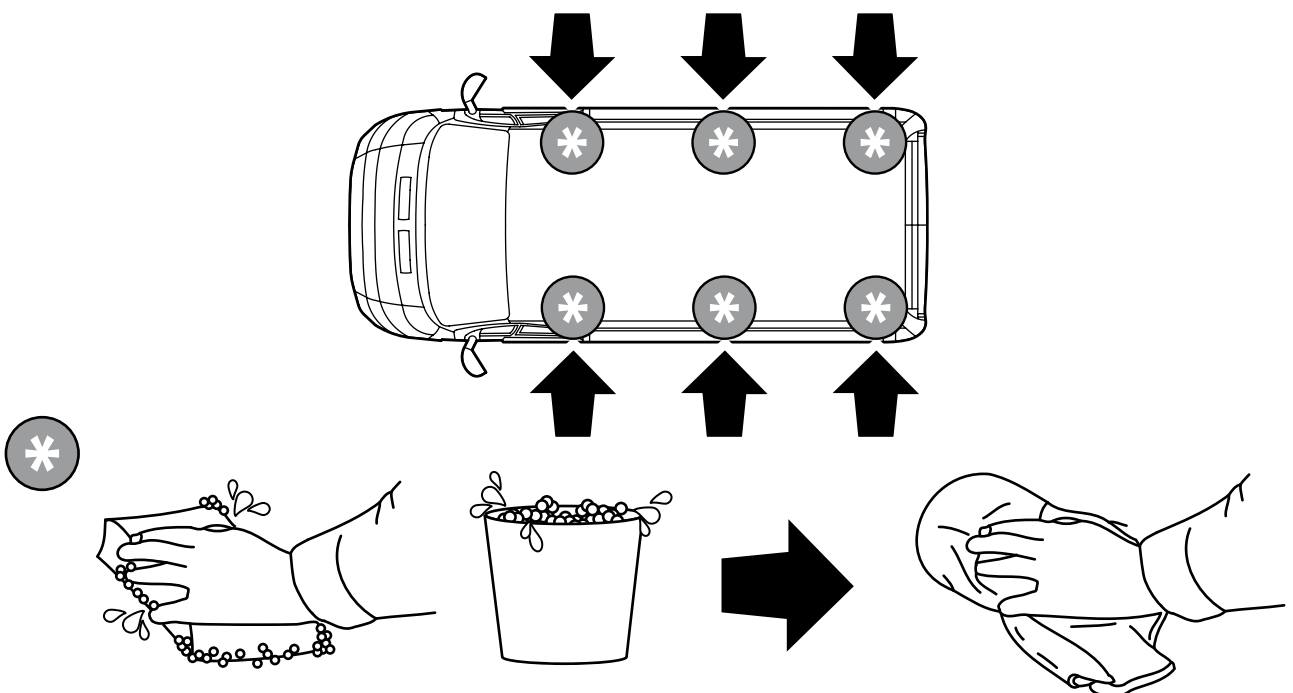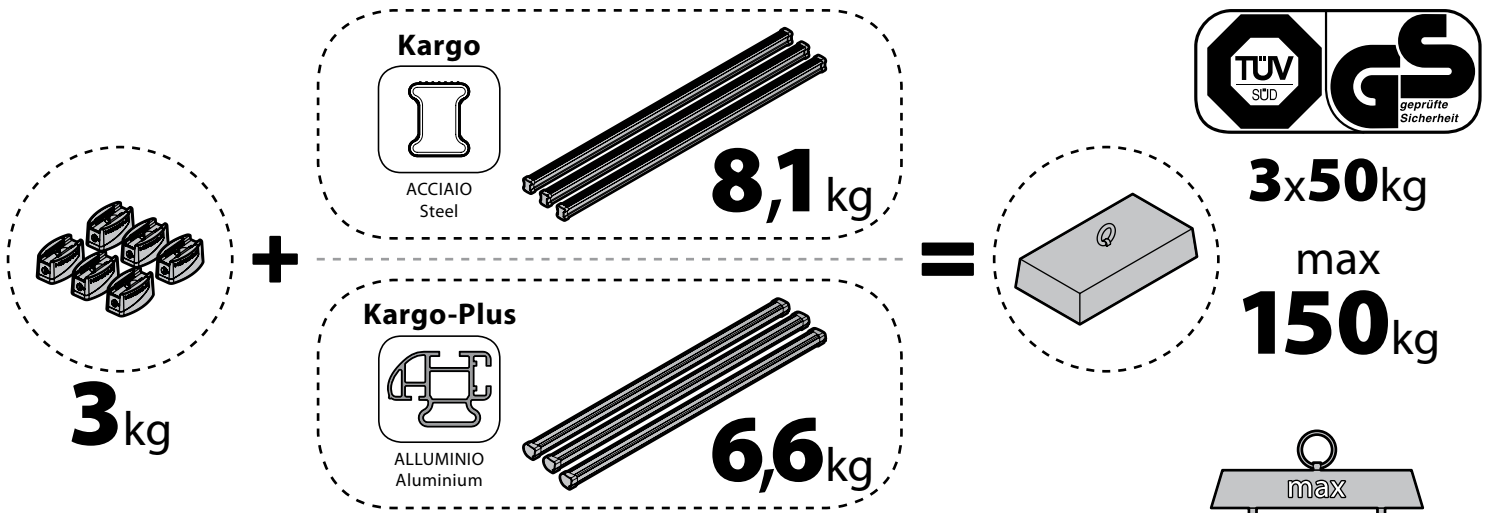


(I) ISTRUZIONI DI MONTAGGIO  
 (GB) FITTING INSTRUCTIONS  
 (D) MONTAGEANLEITUNG  
 (F) INSTRUCTIONS DE MONTAGE  
 (E) INSTRUCCIONES DE MONTAJE  
 (P) INSTRUÇÕES DE MONTAGEM  
 (NL) MONTAGE-INSTRUCTIES  
 (S) MONTERINGSANVISNING

(FIN) ASENNUSOHJE  
 (EST) PAIGALDUSJUHEND  
 (LAT) STIPRINĀŠANAS INSTRUKCIJA  
 (LT) PRITVIRTINIMO INSTRUKCIJOS  
 (PL) INSTRUKCJA MONTAŻU  
 (RUS) Инструкции по установке  
 (CZ) NÁVOD NA MONTÁŽ  
 (SK) NÁVOD NA MONTÁŽ


(SLO) NAVODILA ZA PRITRJEVANJE  
 (HR) UPUTA ZA SASTAVLJANJE  
 (H) A FELSZERELÉS MÓDJA  
 (GR) Οδηγίες συναρμολόγησης  
 (TR) MONTAJ TALIMATLARL  
 (BG) ИНСТРУКЦИИ ЗА МОНТАЖ  
 (SRB) UPUTSTVA ZA MONTAŽU

1

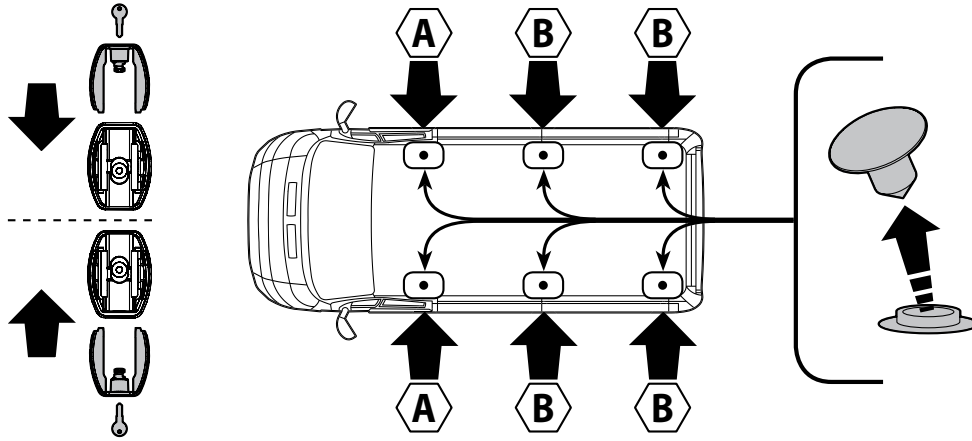


2

A

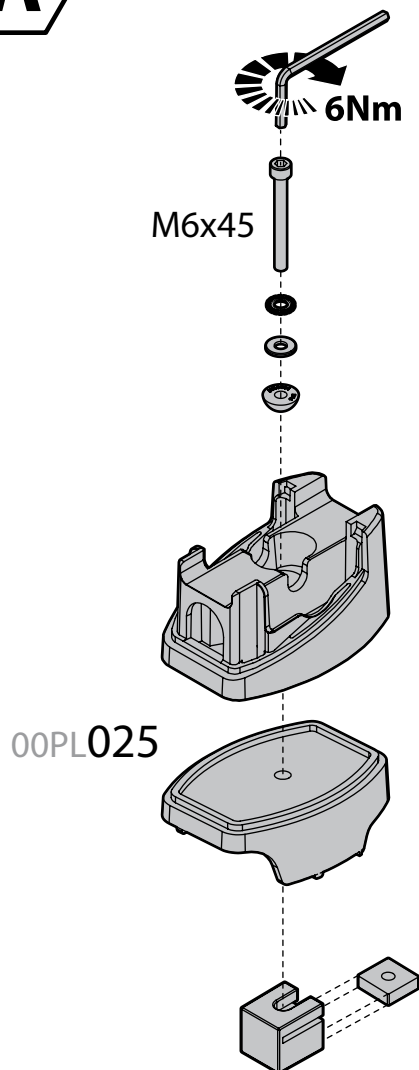


2


B

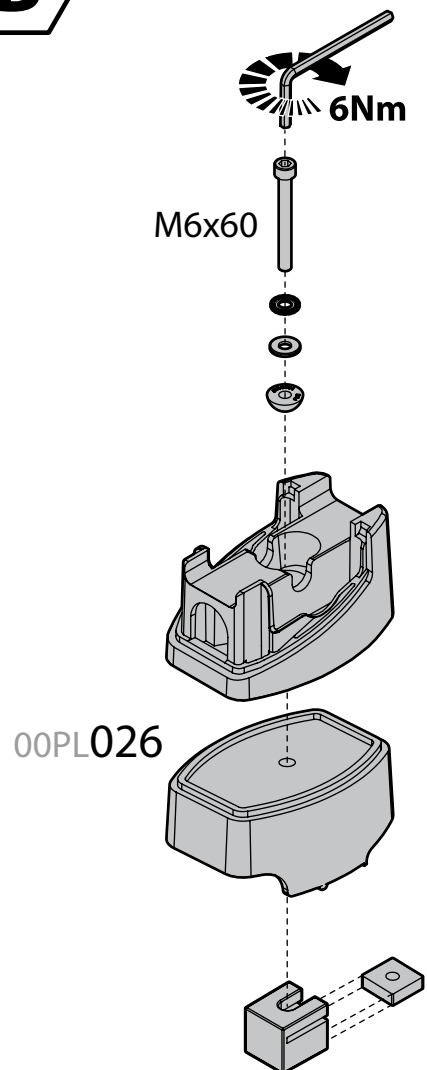

3

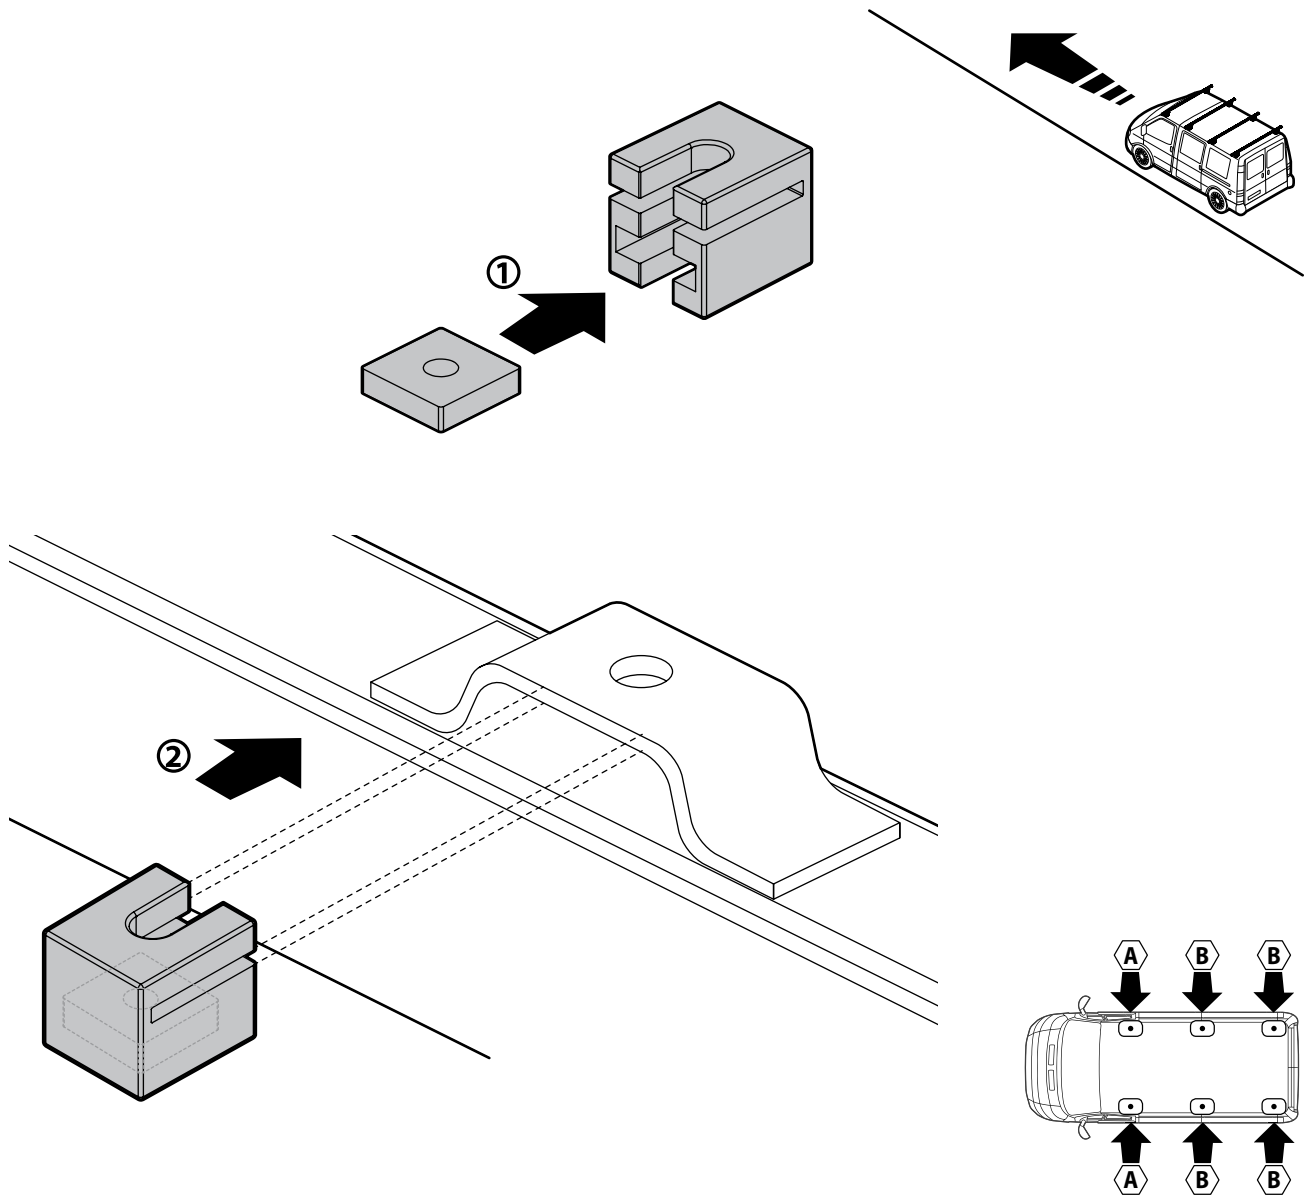

4

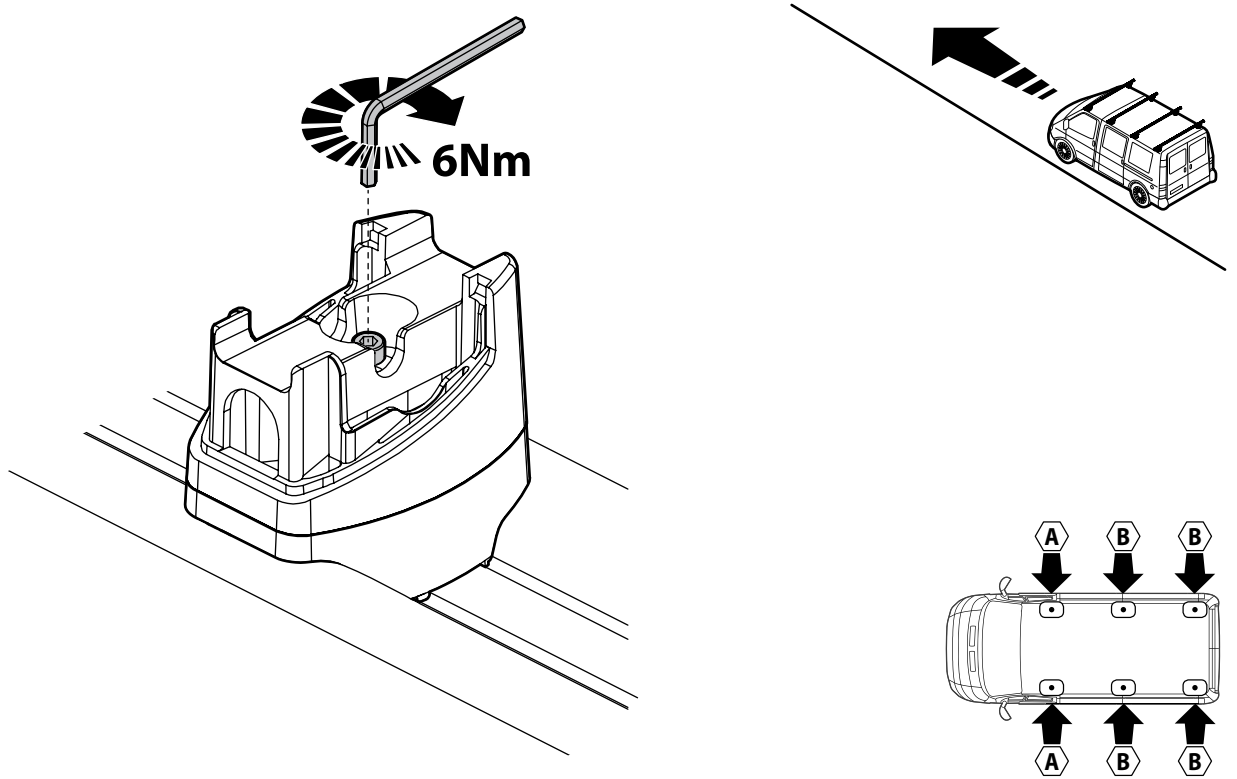




# ATTENZIONE WARNING




## A Kargo

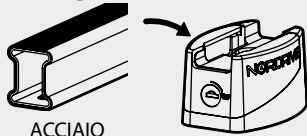

ACCIAIO  
Steel

MONTAGGIO DIRETTO  
SUI KIT PIEDI SPECIFICI  
DIRECTLY ON FOOT KITS  
BEFESTIGUNGSFÜSSE





## B Kargo-Plus

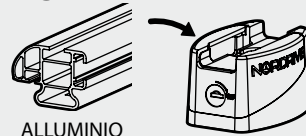
















ALLUMINIO  
Aluminium

MONTAGGIO DIRETTO  
SUI KIT PIEDI SPECIFICI  
DIRECTLY ON FOOT KITS  
BEFESTIGUNGSFÜSSE

# A

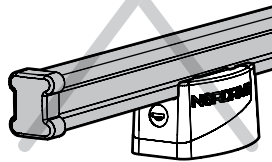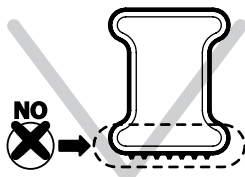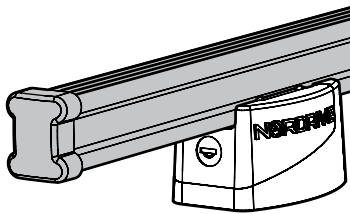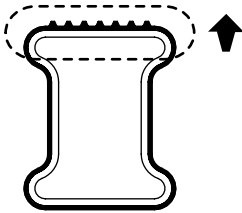


# B

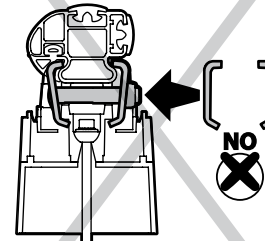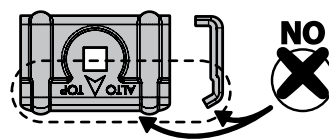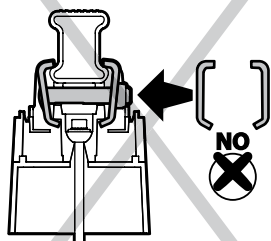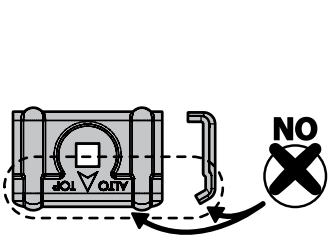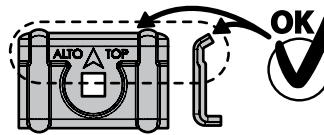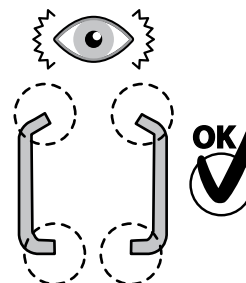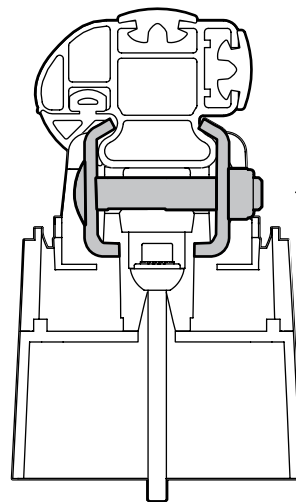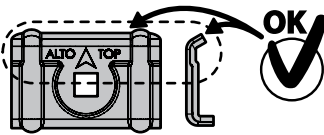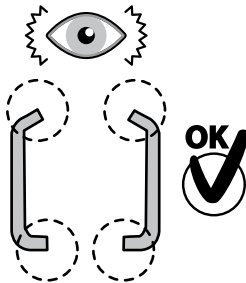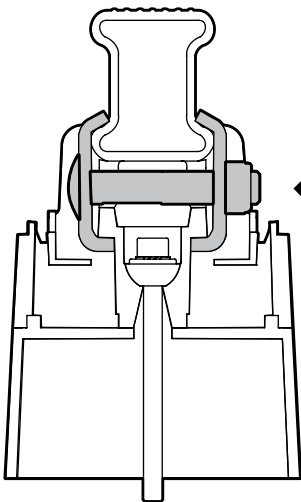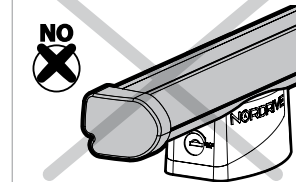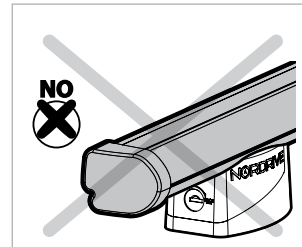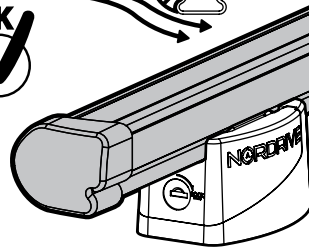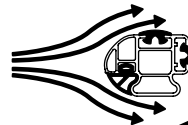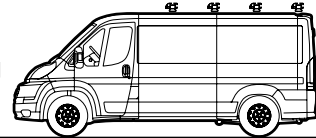


# 5

### A

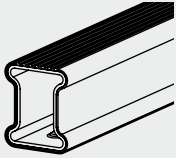

## Kargo



ACCIAIO  
Steel


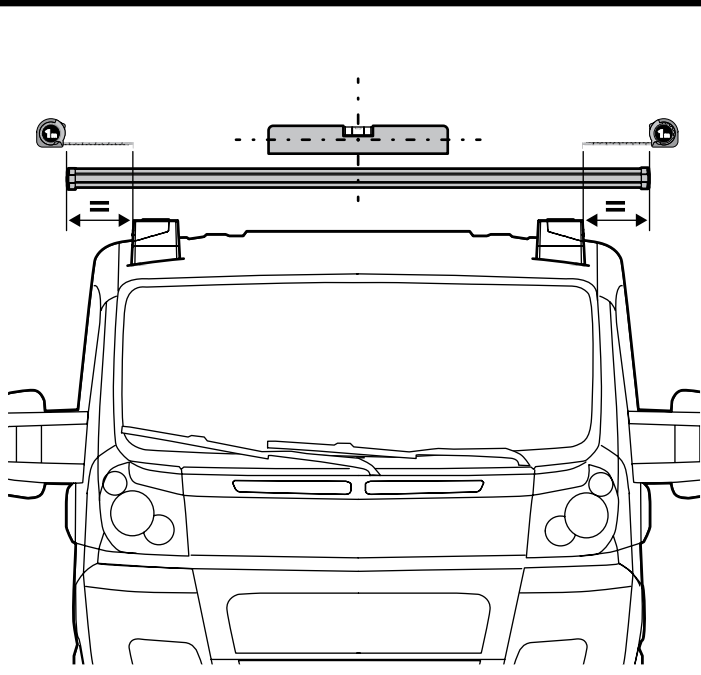



Diagram showing the Kargo steel bar being installed on a car roof. The bar is positioned across the roof rails, and the diagram indicates the correct placement and alignment.

### B



## Kargo-Plus

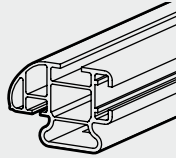

ALLUMINIO  
Aluminium

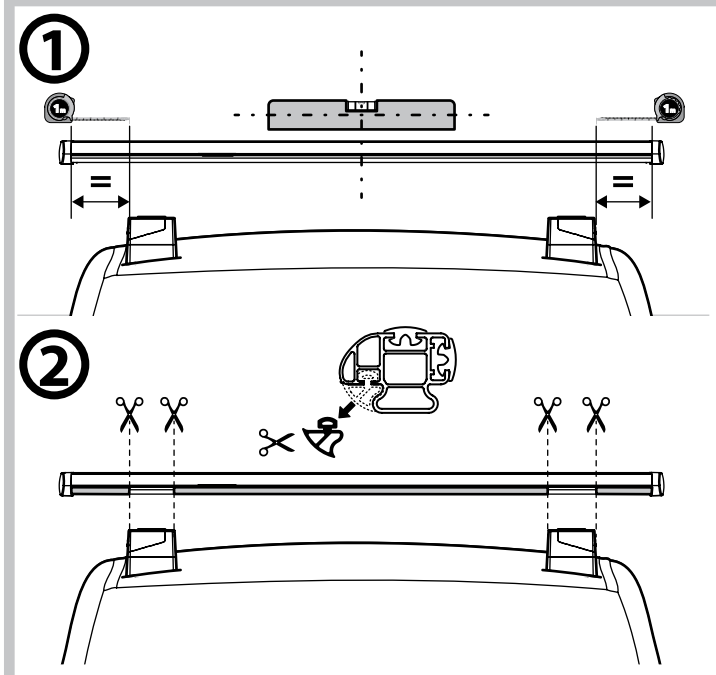


Diagram showing the Kargo-Plus aluminium bar being installed on a car roof. Step 1 shows the bar being placed on the roof rails. Step 2 shows the bar being secured with clips, with scissors indicating where to cut the clips.

# 6

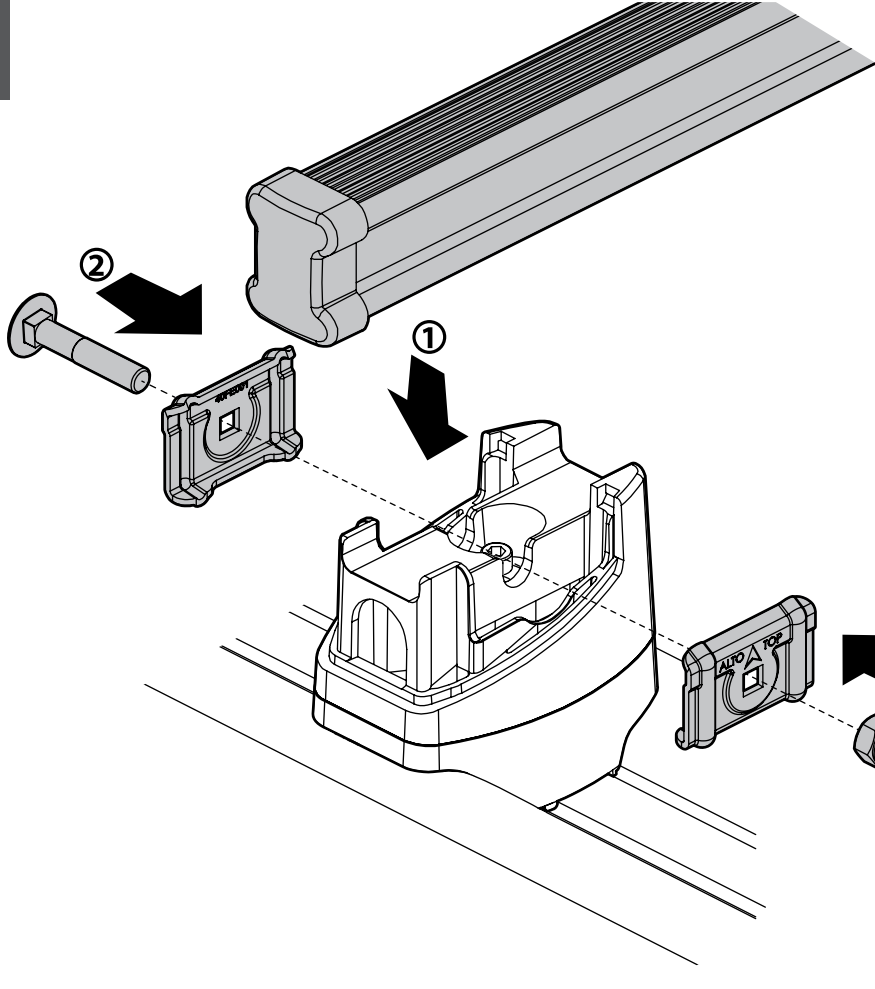


Diagram showing the assembly of the Kargo-Plus aluminium bar. Step 1 shows the bar being inserted into the mounting bracket. Step 2 shows the bar being secured with a bolt. Step 3 shows the bar being secured with a nut. An inset diagram shows the bar being installed on a car roof, with arrows indicating the direction of installation.


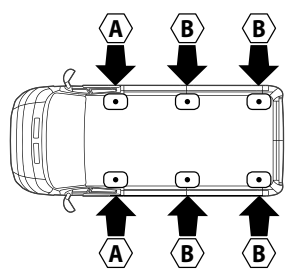



Diagram showing the layout of the Kargo-Plus aluminium bar on a car roof. The bar is positioned across the roof rails, and the diagram indicates the correct placement and alignment. The layout is labeled with A and B, indicating the positions of the mounting brackets.




7

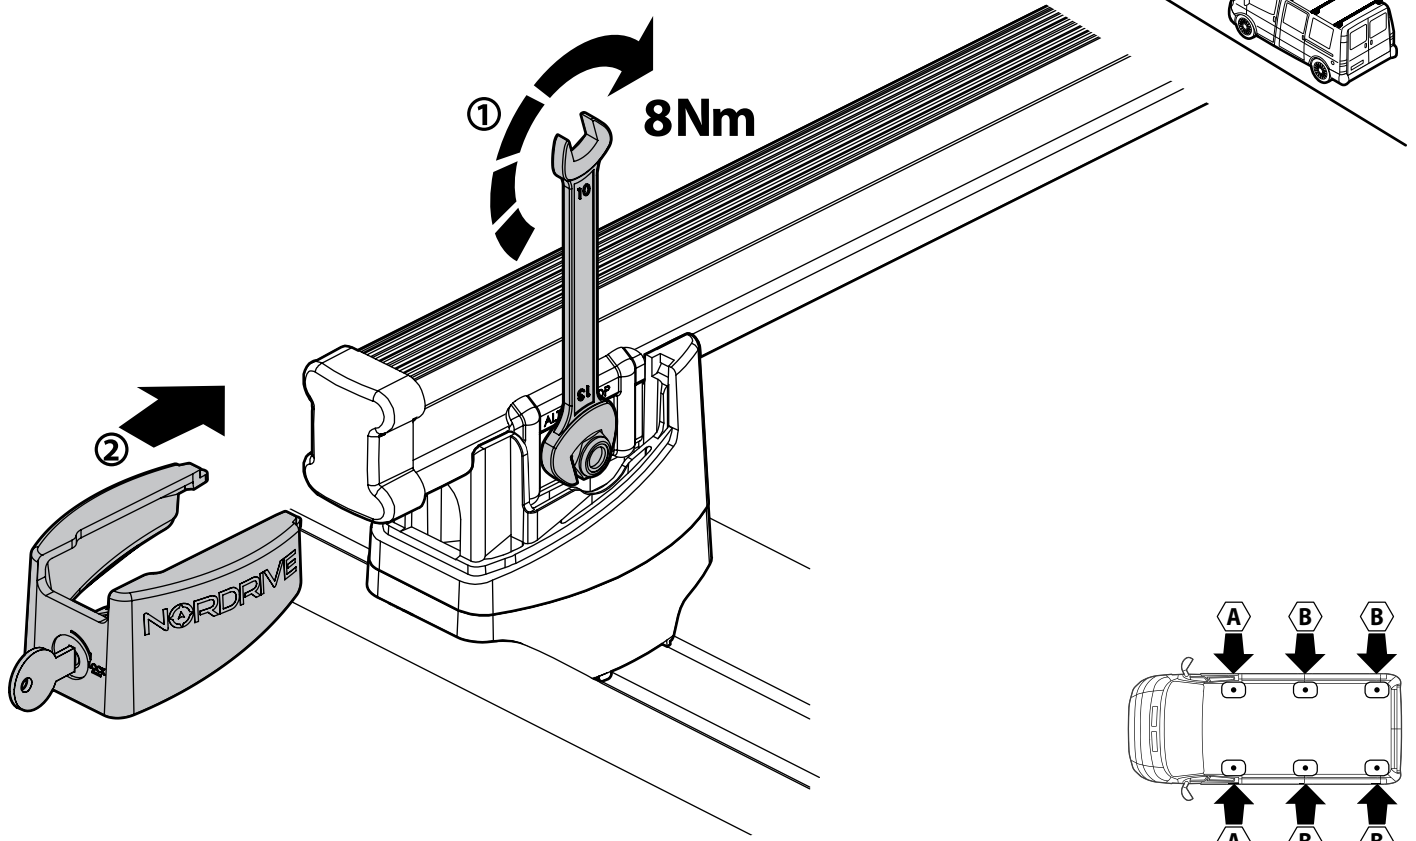


8

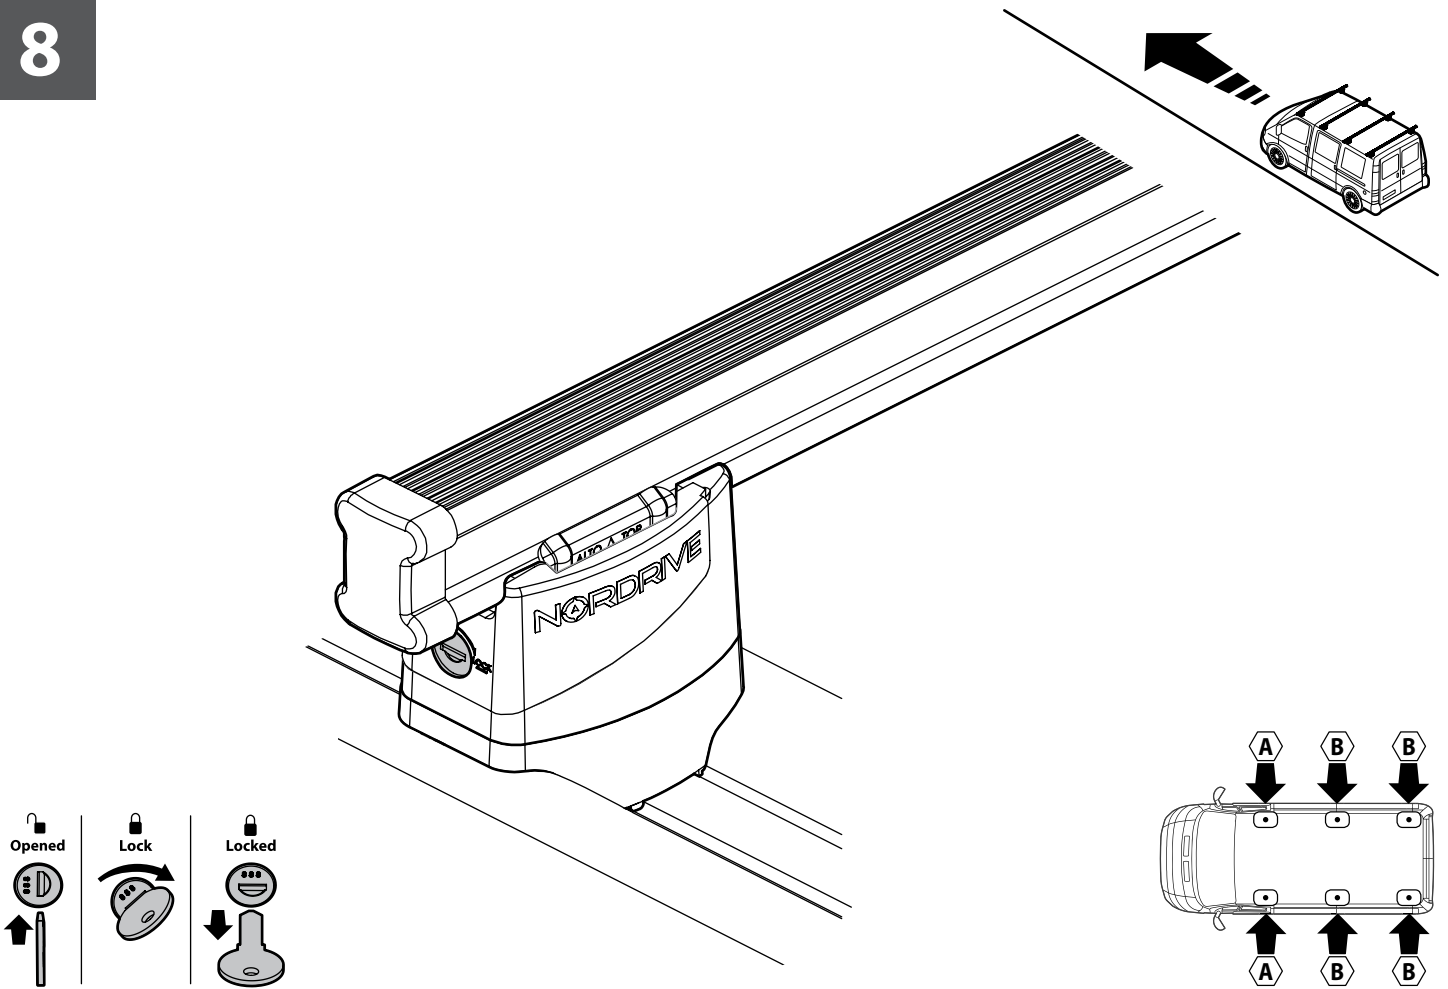

# Kargo series

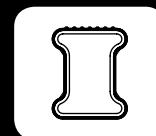


Acciaio / Steel

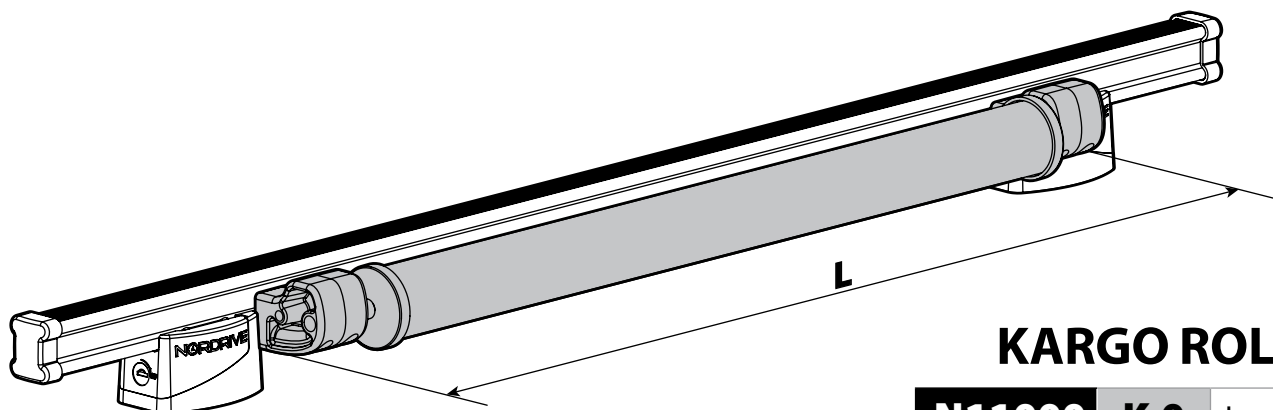


## KARGO ROLLER

<b>N11000</b>	<b>K-0</b>	L = 64 cm
<b>N11003</b>	<b>K-7</b>	L = 96 cm

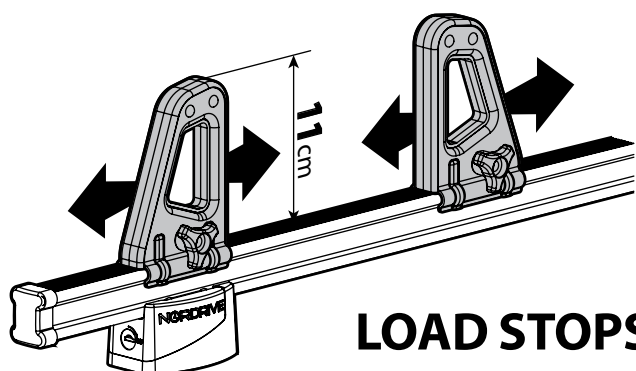


## LOAD STOPS

**N11001** K-1

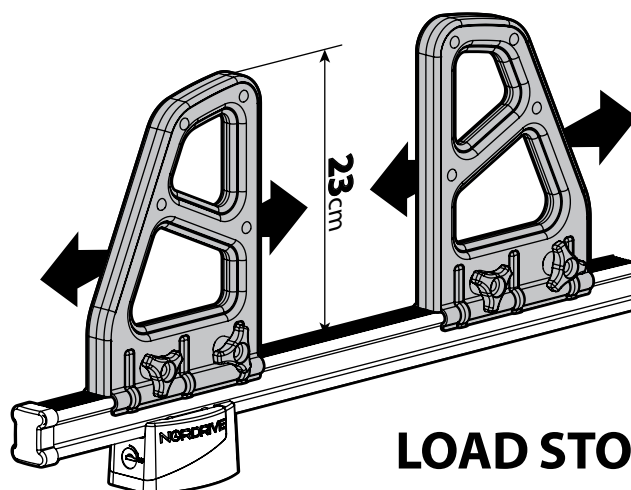

## LOAD STOPS

**N11002** K-2

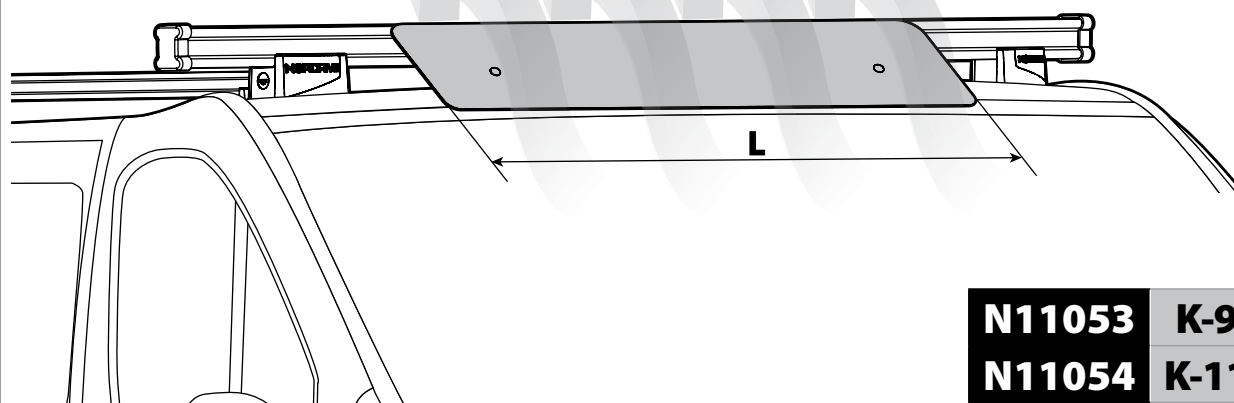


## SPOILER


<b>N11053</b>	<b>K-9</b>	L = 95 cm
<b>N11054</b>	<b>K-11</b>	L = 110 cm

**OPTIONALS** PER / FOR / FÜR:

# Kargo-Plus series

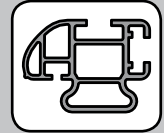


Alluminio / Aluminium

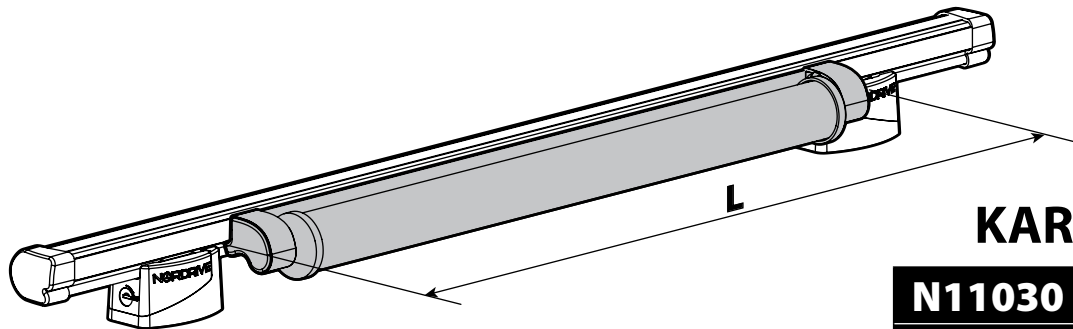


## KARGO ROLLER

<b>N11030</b>	<b>KP-0</b>	L = 64 cm
<b>N11034</b>	<b>KP-7</b>	L = 96 cm

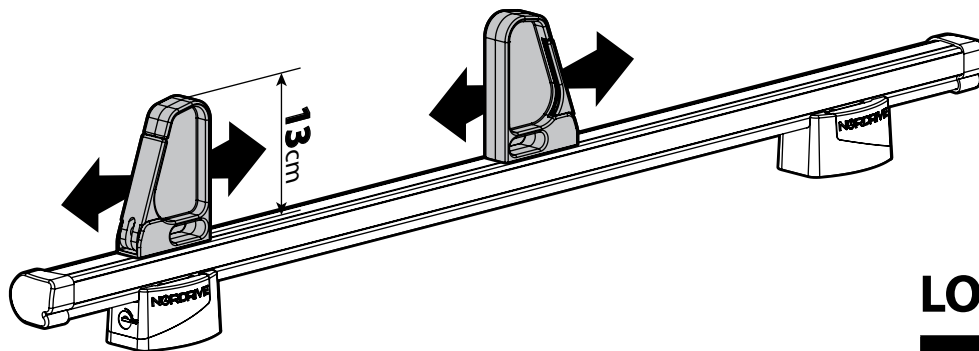


## LOAD STOPS

**N11031** KP-1

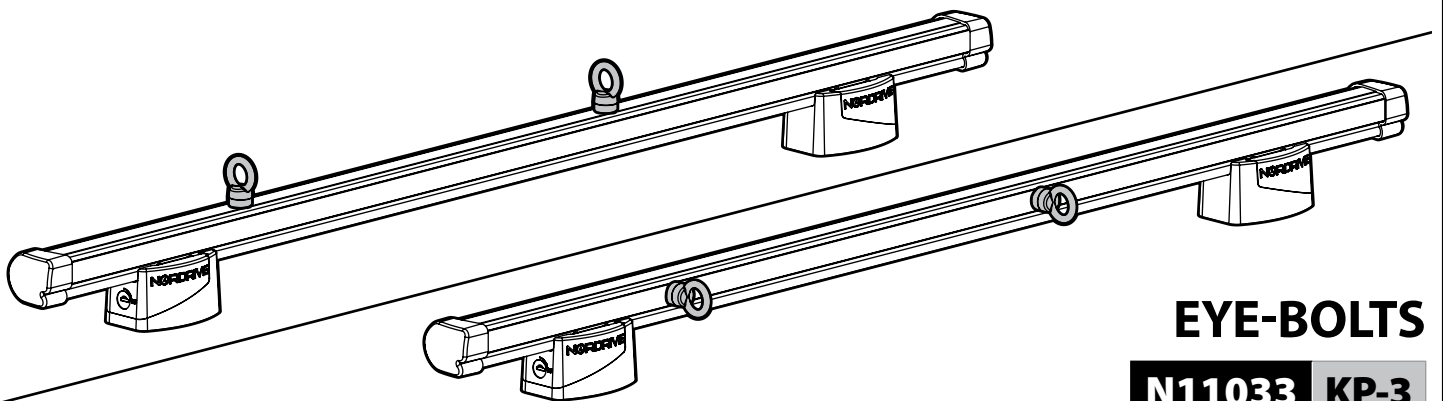

## EYE-BOLTS

**N11033** KP-3

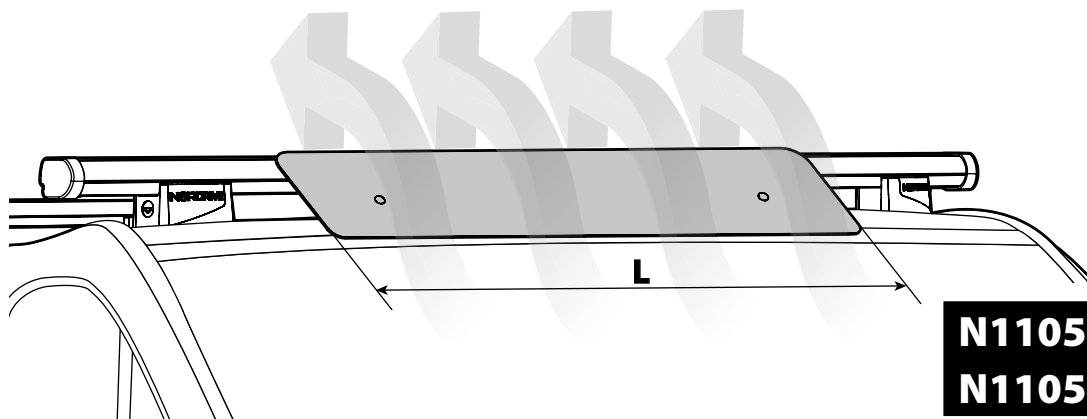

## SPOILER

<b>N11057</b>	<b>KP-9</b>	L = 95 cm
<b>N11058</b>	<b>KP-11</b>	L = 110 cm


OPTIONALS PER / FOR / FÜR:

# Kargo series



Acciaio / Steel


# Kargo-Plus series

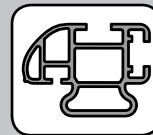

Alluminio / Aluminium



## KARGO-TUBE

<b>N11050</b>	<b>T200</b>	L = 205 cm
<b>N11051</b>	<b>T300</b>	L = 305 cm
<b>N11052</b>	<b>T400</b>	L = 405 cm

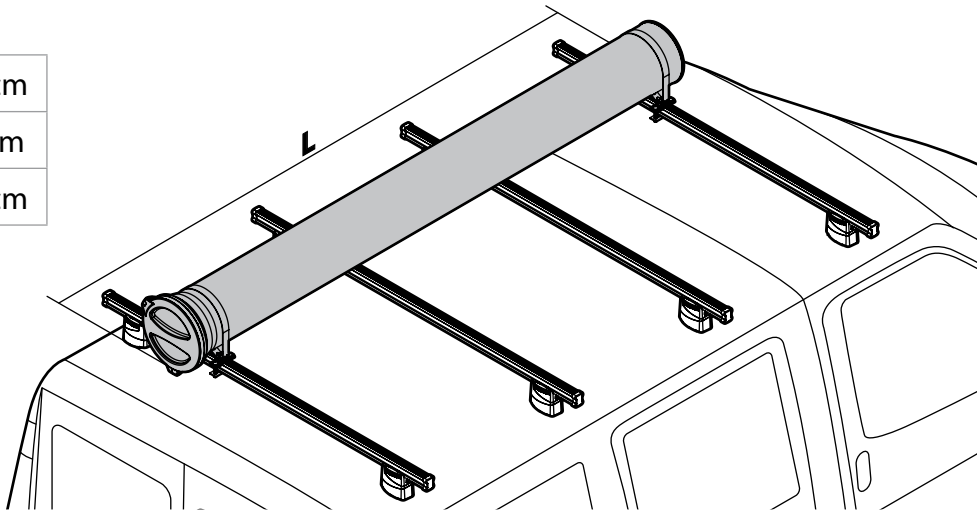


## LADDER HOLDER STRAPS

**N11065 U-5**

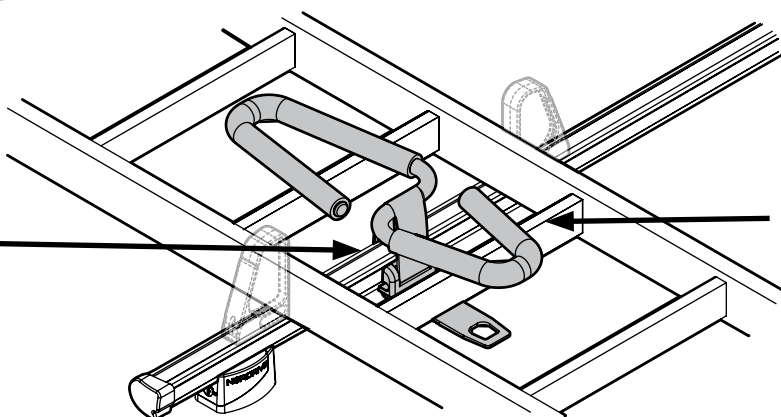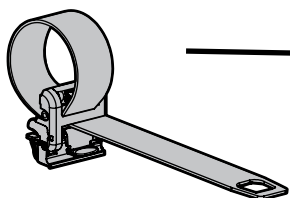

## LADDER STEP ADAPTER

**N11067 U-6**

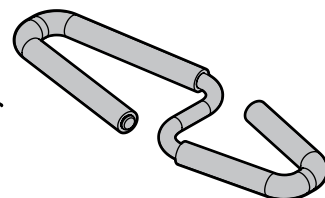

## EXTENSION ROLLER

<b>N11020</b>	<b>U-0</b>	L = 64 cm
<b>N11021</b>	<b>U-7</b>	L = 96 cm

